

| | | |
|---|-------------------------------|--------------------------|
| elausys Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 1 of 17 |

ELAUSYS

INV-KNX

KNX Gateway

for SMA Inverters

User Manual



| | | |
|---|-------------------------------|--------------------------|
|  elausys <small>Electronic & Automation Systems</small> | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 2 of 17 |

TABLE OF CONTENT

| | |
|---------------------------------------|-----------|
| 1. INTRODUCTION | 3 |
| 2. OVERVIEW | 3 |
| 2.1 USAGE & LIMITATION..... | 3 |
| 2.1 SOFTWARE..... | 3 |
| 2.2 CONNECTION DIAGRAM..... | 4 |
| 2.3 FRONT PANEL | 4 |
| 3. PARAMETERS | 5 |
| 3.1 INVERTER SETTINGS..... | 5 |
| 4. LOGIC FUNCTIONS | 6 |
| 5. COMMUNICATION OBJECTS | 7 |
| 5.1 GENERAL..... | 7 |
| 5.2 INVERTERS OBJECTS..... | 7 |
| 5.3 GROUP OBJECT LIST | 10 |
| 6. CONFIGURATION | 13 |
| 6.1 NETWORK CONFIGURATION..... | 13 |
| 6.2 KNX PHYSICAL DEVICE..... | 14 |
| 6.3 ETS PARAMETERS..... | 14 |
| 6.4 ETS GROUP OBJECTS | 15 |
| 6.5 INVERTER CONFIGURATION..... | 16 |
| 7. FIRMWARE VERSION | 17 |
| 8. DATASHEET | 17 |

| | | |
|---|-------------------------------|--------------------------|
|  elausys Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 3 of 17 |

1. INTRODUCTION

The KNX gateway for SMA SUNNY BOY / SUNNY TRIPOWER inverters provides a simple solution to transfer all relevant data from the inverters to KNX.

It allows integrators to take advantage of a fully integrated solar panel inverter, the data can be used to optimize energy consumption, monitoring, trending or to trigger specific action in the KNX installation.

Main features:

- KNX Interface for SMA SUNNY BOY / SUNNY TRIPOWER inverters serie
- Monitoring of Energy, Power, current, voltage, frequency, temperature, ...
- Connected to the inverter over Ethernet
- Galvanic insulation from the KNX bus
- Configurable refresh rate of inverter data
- DIN rail mounted
- Auxiliary power supply 12-30VDC
- KNX logic module including logic gates, sequences, triggers, math operation and weekly calendar events.

2. OVERVIEW

2.1 USAGE & LIMITATION

This gateway is intended to be used with an SMA inverter compatible with the SMA SunSpec modbus interface definition. The inverter is connected to the ethernet network on the same router as the KNX gateway.

2.1 SOFTWARE

The KNX Interface is configured using the ETS tool, the free ETS Demo version can be [downloaded](#) from the website of KNX Association. The free version allows to configure up to 5 KNX modules in a project, the KNX gateway is only one module, all devices can be configured using this version.

| | | |
|---|-------------------------------|--------------------------|
| elausys Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 4 of 17 |


2.2 CONNECTION DIAGRAM

The KNX bus is connected on the top side of the gateway.

An external power supply 12-30VDC is required and connected on the bottom side of the module, beside the RJ45 connector for the ethernet cable.



2.3 FRONT PANEL

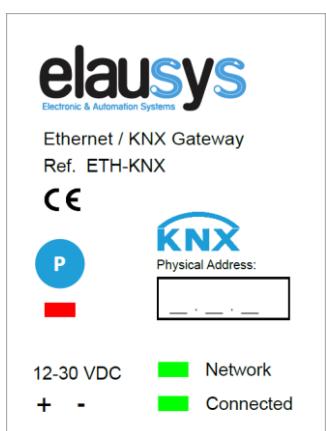

The front panel is equipped with two green status LED:

Network: Physical connection to the ethernet network is established.
Connected: Communication with the inverter is established.

Button “P” : KNX Programming mode button
Red LED : KNX Programming status LED

| | | |
|--|-------------------------------|--------------------------|
|  Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 5 of 17 |

3. PARAMETERS

The KNX interface parameters are defined in the “parameters” tab of the device, in the ETS project.

3.1 INVERTER SETTINGS

The following parameters are defined in the inverter settings section of the parameters:

| PARAMETER | VALUES | DESCRIPTION |
|-----------------------|--|--|
| AC Network | <ul style="list-style-type: none"> ▪ Single phase (default) ▪ Tri-Phase | Type of AC network |
| Number of PV Circuits | <ul style="list-style-type: none"> ▪ 1 ... 4 | PV Circuits 1 or 2 applicable for this type of inverters |
| Inverter model | <ul style="list-style-type: none"> ▪ 0...255 | 1 = SMA Inverters |
| Refresh rate (min) | <ul style="list-style-type: none"> ▪ 0...255 | Cyclic rate of data polling from the inverter. |
| Battery 1 | <ul style="list-style-type: none"> ▪ Not Used / Used | Display group objects to monitor the status of battery 1 |
| Battery 2 | <ul style="list-style-type: none"> ▪ Not Used / Used | Display group objects to monitor the status of battery 2 (NOT USED for this inverter) |

| | | |
|----------------------|--|--|
| Powermeter | <ul style="list-style-type: none"> ▪ Not Used / Used | Display group objects to monitor the powermeter value (NOT USED for this inverter) |
| Timezone | <ul style="list-style-type: none"> ▪ UTC-11... UTC+14 | Timezone where the device is installed. It is used for logic functions based on the weekly calendar. |
| Daylight saving time | <ul style="list-style-type: none"> ▪ Not Used / Used | Set if daylight saving is used where the device is installed. It is used for logic functions based on the weekly calendar. |
| Device Options | Text string | Device options are not available on this device. |

4. LOGIC FUNCTIONS

The KNX logic module is a virtual extension module that is part of the ETS application on the inverters gateways. Each logic module includes 8 logic functions including logic gates, sequences, triggers, math operation and weekly calendar events.

- Up to **64 logic functions** using extension modules
- **Logic Gate** with 8 inputs, configurable output delay and inversion
- **Sequence** with 4 steps, configurable outputs delays and datatypes
- **Trigger** with inputs logic, delays and weekly calendar events
- **Math** operations with configurable objects type and delays

Refer to the KNX Logic Module manual for more details on each function.

| | | |
|---|-------------------------------|--------------------------|
|  elausys Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 7 of 17 |

5. COMMUNICATION OBJECTS

5.1 GENERAL

General communication objects of the device.

| GO | NAME | DESCRIPTION |
|----|------------------|---|
| 1 | Module status | Sends 0 when the module is operating normally, sends an error code when applicable. |
| 2 | Firmware version | Returns the firmware version of the device when the object is read. |

5.2 INVERTERS OBJECTS

| GO | NAME | DESCRIPTION |
|----|---------------|--|
| 3 | AC Current | AC Total Current value |
| 4 | AC Current A | AC Current phase A |
| 5 | AC Current B | AC Current phase B |
| 6 | AC Current C | AC Current phase C |
| 7 | AC Voltage | AC Total Voltage (NOT USED) |
| 8 | AC Voltage AB | AC Voltage phase AB |
| 9 | AC Voltage BC | AC Voltage phase BC |
| 10 | AC Voltage CA | AC Voltage phase CA |
| 11 | AC Voltage AN | AC Voltage phase AN |
| 12 | AC Voltage BN | AC Voltage phase BN |
| 13 | AC Voltage CN | AC Voltage phase CN |
| 14 | DC Current | DC Total Current value (NOT USED) |
| 15 | DC Voltage | DC Total Voltage (NOT USED) |
| 16 | PV1 Voltage | PV1 Voltage |

| | | |
|----|---------------------------------|--|
| 17 | PV1 Current | PV1 Current |
| 18 | PV2 Voltage | PV2 Voltage |
| 19 | PV2 Current | PV2 Current |
| 20 | PV3 Voltage | PV3 Voltage (NOT USED) |
| 21 | PV3 Current | PV3 Current (NOT USED) |
| 22 | PV4 Voltage | PV4 Voltage (NOT USED) |
| 23 | PV4 Current | PV4 Current (NOT USED) |
| 24 | AC Power | AC Power |
| 25 | DC Power | DC Power (NOT USED) |
| 26 | AC Frequency | AC Frequency |
| 27 | AC VA | AC Apparent power |
| 28 | AC VAR | AC Reactive power (NOT USED) |
| 29 | AC PF | Power factor |
| 30 | AC Energy | Total AC Energy |
| 31 | Efficiency | Inverter efficiency (NOT USED) |
| 32 | Insulation | Insulation resistance |
| 33 | Temperature | Cabinet temperature |
| 40 | Daily Energy Yield | (NOT USED) |
| 41 | Battery 1 Running Status | 0 = Off 6 = Discharging 7 = Charging 8 = Float charge |
| 42 | Battery 1 power | (NOT USED) |
| 43 | Battery 1 SOC | Battery state of charge |
| 44 | Battery 1 current day charge | (NOT USED) |
| 45 | Battery 1 current day discharge | (NOT USED) |
| 46 | Battery 1 total charge | (NOT USED) |
| 47 | Battery 1 total discharge | (NOT USED) |
| 48 | Battery 2 Running Status | (NOT USED) |
| 49 | Battery 2 power | (NOT USED) |

| | | |
|--|-------------------------------|--------------------------|
|  Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 9 of 17 |

| | | |
|----|---------------------------------|------------|
| 50 | Battery 2 SOC | (NOT USED) |
| 51 | Battery 2 current day charge | (NOT USED) |
| 52 | Battery 2 current day discharge | (NOT USED) |
| 53 | Battery 2 total charge | (NOT USED) |
| 54 | Battery 2 total discharge | (NOT USED) |
| 55 | Powermeter | (NOT USED) |

| | | | |
|--|--------------------------------------|--|--------------------------|
|  elausys Electronic & Automation Systems | User Manual | | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | | Revision : 2.01 |
| | Page : 10 of 17 | | |

5.3 GROUP OBJECT LIST

| GO | Name | Function | Size | Flags | Type ID | Type Name | Description |
|----|------------------|--------------|----------|-----------|---------|------------------------|--------------------------------|
| 1 | Module status | Status code | 1 byte | C R - T - | 20.011 | DPT_ErrorClass_System | Device status |
| 2 | Firmware version | Text String | 14 bytes | C R - T - | 16.000 | Character string | Firmware version of the device |
| 3 | AC Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | AC Total Current value |
| 4 | AC Current A | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | AC Current phase A |
| 5 | AC Current B | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | AC Current phase B |
| 6 | AC Current C | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | AC Current phase C |
| 7 | AC Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Total Voltage |
| 8 | AC Voltage AB | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase AB value |
| 9 | AC Voltage BC | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase BC value |
| 10 | AC Voltage CA | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase CA value |
| 11 | AC Voltage AN | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase AN value |
| 12 | AC Voltage BN | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase BN value |
| 13 | AC Voltage CN | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | AC Voltage Phase CN value |
| 14 | DC Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | DC Total Current value |
| 15 | DC Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | DC Total Voltage |
| 16 | PV1 Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | PV1 Voltage |
| 17 | PV1 Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | PV1 Current |
| 18 | PV2 Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | PV2 Voltage |
| 19 | PV2 Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | PV2 Current |



User Manual

Doc.Ref : INV-KNX-SMA-UM

KNX Gateway for SMA Inverters

Revision : 2.01

Page : 11 of 17

| | | | | | | | |
|----|---------------------------------|--------------|---------|-----------|--------|------------------------|-----------------------|
| 20 | PV3 Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | PV3 Voltage |
| 21 | PV3 Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | PV3 Current |
| 22 | PV4 Voltage | Actual value | 4 bytes | C R - T - | 14.027 | Electric potential (V) | PV4 Voltage |
| 23 | PV4 Current | Actual value | 4 bytes | C R - T - | 14.019 | Electric current (A) | PV4 Current |
| 24 | AC Power | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | AC Power |
| 25 | DC Power | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | DC Power |
| 26 | AC Frequency | Actual value | 4 bytes | C R - T - | 14.033 | Frequency (Hz) | AC Frequency |
| 27 | AC VA | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | AC Apparent power |
| 28 | AC VAR | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | AC Reactive power |
| 29 | AC PF | Actual value | 4 bytes | C R - T - | 14.057 | Power factor (cos phi) | Power factor |
| 30 | AC Energy | Actual value | 4 bytes | C R - T - | 13.013 | Active energy (kWh) | Total AC Energy |
| 31 | Efficiency | Actual value | 2 bytes | C R - T - | 8.010 | Percentage (%) | Inverter efficiency |
| 32 | Insulation | Actual value | 4 bytes | C R - T - | 14.056 | Resistance (Ohm) | Insulation resistance |
| 33 | Temperature | Actual value | 2 bytes | C R - T - | 9.001 | Temperature (°C) | Cabinet temperature |
| 40 | Daily Energy Yield | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 41 | Battery 1 Running Status | Actual value | 2 bytes | C R - T - | - | - | Status code |
| 42 | Battery 1 power | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | |
| 43 | Battery 1 SOC | Actual value | 1 byte | C R - T - | 5.001 | Percentage (%) | State of charge (%) |
| 44 | Battery 1 current day charge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 45 | Battery 1 current day discharge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 46 | Battery 1 total charge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 47 | Battery 1 total discharge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 48 | Battery 2 Running Status | Actual value | 2 bytes | C R - T - | - | - | Status code |

**User Manual**

Doc.Ref : INV-KNX-SMA-UM

KNX Gateway for SMA Inverters

Revision : 2.01

Page : 12 of 17

| | | | | | | | |
|----|---------------------------------|--------------|---------|-----------|--------|----------------|---------------------|
| 49 | Battery 2 power | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | |
| 50 | Battery 2 SOC | Actual value | 1 byte | C R - T - | 5.001 | Percentage (%) | State of charge (%) |
| 51 | Battery 2 current day charge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 52 | Battery 2 current day discharge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 53 | Battery 2 total charge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 54 | Battery 2 total discharge | Actual value | 4 bytes | C R - T - | 13.013 | Energy (kWh) | |
| 55 | Powermeter | Actual value | 4 bytes | C R - T - | 14.056 | Power (W) | |

| | | |
|--|-------------------------------|--------------------------|
|  elausys <small>Electronic & Automation Systems</small> | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 13 of 17 |

6. CONFIGURATION

6.1 NETWORK CONFIGURATION

By default, the IP address of the KNX gateway is set to **192.168.1.51**

Using a laptop connected to the gateway, open a web browser and navigate to the IP address of the gateway.



Set a fixed IP address of your choice for the KNX gateway and configure the modbus TCP settings as below:

- Mode : Connect
- IP : IP Address of the inverter
- Server Port : 502
- Uni Id : 126 (See note below)

NOTE : SMA Inverter Unit ID must be set to 3 on the inverter to be accessible using Unit id 126 on the gateway ! There is an offset of +123 from the ID set on the inverter.

6.2 KNX PHYSICAL DEVICE

ELAUSYS devices are configured using the ETS tool. You should first download and install the free version of ETS tool before you continue.

The INV-KNX Interface must be assigned a physical address on the KNX network. Assign a free address to the module, in our example we choose 1.1.2.



6.3 ETS PARAMETERS

Once a KNX physical address is set, open the parameter tab to configure the interface.

1.1.30 ELAUSYS INV-KNX > General

| | | |
|----------------|-----------------------|---|
| General | AC Network | <input type="radio"/> Single-phase <input checked="" type="radio"/> Tri-phase |
| | Number of PV circuits | 2 |
| | Inverter model | 0 |
| | Refresh rate (min) | 1 |
| | Battery 1 | <input type="radio"/> Not used <input checked="" type="radio"/> Used |
| | Battery 2 | <input type="radio"/> Not used <input checked="" type="radio"/> Used |
| | Powermeter | <input type="radio"/> Not used <input checked="" type="radio"/> Used |
| | Device options : | <input type="text"/> |

Select the type of AC network (single phase or tri-phase).

Set the **inverter model to 1 for SMA inverters**

Choose the refresh rate (min) for the complete set of data.

Choose if battery 1 is available on the inverter.

Device options should remain empty.

| | | |
|--|-------------------------------|--------------------------|
|  Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 15 of 17 |

6.4 ETS GROUP OBJECTS

A group address (GA) must be assigned to each group object (GO) needed by the application. Open the Group Objects tab of the device and assign a GA to the objects as needed.

| Number | Name | Object Function | Description | Group Address | Length | C | R | W | T | U | Data Type | Priority |
|--------|-----------------------------------|-----------------|-------------|---------------|----------|---|---|---|---|---|-----------------|----------|
| 1 | Module status | Status code | Status | 0/0/1 | 1 byte | C | R | - | T | - | system err... | Low |
| 2 | Firmware version | Text string | FW | 0/0/2 | 14 bytes | C | R | - | T | - | Character... | Low |
| 3 | AC Total Current | Actual value | Value | 1/0/0 | 4 bytes | C | R | - | T | - | electric cur... | Low |
| 7 | AC Total voltage | Actual value | Value | 1/0/1 | 4 bytes | C | R | - | T | - | electric po... | Low |
| 14 | DC Total Current | Actual value | Value | 1/0/2 | 4 bytes | C | R | - | T | - | electric cur... | Low |
| 15 | DC Total voltage | Actual value | Value | 1/0/3 | 4 bytes | C | R | - | T | - | electric po... | Low |
| 16 | PV1 Voltage | Actual value | Value | 1/0/4 | 4 bytes | C | R | - | T | - | electric po... | Low |
| 17 | PV1 Current | Actual value | Value | 1/0/5 | 4 bytes | C | R | - | T | - | electric cur... | Low |
| 24 | AC Power | Actual value | Value | 1/0/6 | 4 bytes | C | R | - | T | - | power (W) | Low |
| 25 | DC Power | Actual value | Value | 1/0/7 | 4 bytes | C | R | - | T | - | power (W) | Low |
| 26 | AC Frequency | Actual value | Value | 1/0/8 | 4 bytes | C | R | - | T | - | frequency... | Low |
| 27 | AC Apparent power | Actual value | Value | 1/0/9 | 4 bytes | C | R | - | T | - | power (W) | Low |
| 28 | AC Reactive power | Actual value | Value | 1/0/10 | 4 bytes | C | R | - | T | - | power (W) | Low |
| 29 | AC power factor | Actual value | Value | 1/0/11 | 4 bytes | C | R | - | T | - | power fact... | Low |
| 30 | AC Energy | Actual value | Value | 1/0/12 | 4 bytes | C | R | - | T | - | active ener... | Low |
| 31 | Inverter efficiency | Actual value | Value | 1/0/13 | 2 bytes | C | R | - | T | - | percentag... | Low |
| 32 | Inverter resistance | Actual value | Value | 1/0/14 | 4 bytes | C | R | - | T | - | | Low |
| 33 | Cabinet Temperature | Actual value | Value | 1/0/15 | 2 bytes | C | R | - | T | - | temperatu... | Low |
| 34 | Manufacturer specific status code | Status code | Value | 1/0/16 | 2 bytes | C | R | - | T | - | | Low |
| 35 | Manufacturer specific status code | Status code | Value | 1/0/17 | 2 bytes | C | R | - | T | - | | Low |
| 36 | Manufacturer specific status code | Status code | Value | 1/0/18 | 2 bytes | C | R | - | T | - | | Low |
| 37 | Manufacturer specific status code | Status code | Value | 1/0/19 | 2 bytes | C | R | - | T | - | | Low |
| 38 | Manufacturer specific status code | Status code | Value | 1/0/20 | 2 bytes | C | R | - | T | - | | Low |
| 39 | Manufacturer specific status code | Status code | Value | 1/0/21 | 2 bytes | C | R | - | T | - | | Low |

When GO and parameters are all configured, download the KNX Interface application to the device. The first download requires to press the programming button on the device to set the device in KNX programming mode then perform a full download.

| | | |
|---|-------------------------------|--------------------------|
|  | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 16 of 17 |

6.5 INVERTER CONFIGURATION

1. Start Sunny Explorer on the computer and create a Speedwire system (see Sunny Explorer user manual).
2. Log into the Speedwire system as **Installer**.
3. Select the SMA inverter to be configured in the system tree.
4. Select the tab **Settings**.
5. Select the parameter group **External Communication**.
6. Select [**Edit**].
 - You will see the categories **TCP Server** and UDP Server under the parameter group Modbus.
7. To activate the TCP server, make the following settings in the group **Modbus > TCP Server**:
 - In the **Activated** drop-down list, select the entry **Yes**.
 - If necessary, change the port in the **Port** field (default setting: 502).
9. Select [**Save**].

| | | |
|--|-------------------------------|--------------------------|
|  Electronic & Automation Systems | User Manual | Doc.Ref : INV-KNX-SMA-UM |
| | KNX Gateway for SMA Inverters | Revision : 2.01 |
| | | Page : 17 of 17 |

7. FIRMWARE VERSION

This user manual and related ETS application is valid for firmware versions V2.2.0.0 and above.
The firmware version can be read from the gateway webpage using a web browser.
It is displayed on the top right of the page.



In case an updated firmware would be available, the device can be updated from the FW Update page, the binary file should be selected before pressing the Update button.

8. DATASHEET

| TECHNICAL DATA | VALUE |
|------------------------------------|---|
| Auxiliary power supply terminal | Screw terminal 12-30VDC / GND |
| Power consumption KNX bus typ. | < 16 mA @ 29VDC |
| Operating temperature | +5°C to + 45°C |
| Enclosure Dimensions (Space Units) | 2 SU |
| Mounting | DIN RAIL |
| KNX terminal | Pluggable micro terminal, Red/Black, 4 pole PUSH WIRE for solid conductor wire 0.6-0.8 mm ² |
| KNX bus voltage | 29 VDC |